

How to perform Fronius Solar.web updates remotely 2024

This guide provided by Fronius will walk you through how to remotely update a Fronius Inverter, via the Solar.web desktop portal.

Firmware-Update via Fronius Solar.web

For a remote update of a component, proceed as follows:

1. On Fronius Solar.web, go to "Settings" --> "Components"
2. Select the check box on the same line as the component you want to update
3. Click the red "Update" button and confirm the pop-up message with "OK" to start the update
4. After the update, the installed version appears on the component page.

Note: Do not disconnect the power supply during the update process

[VIDEO GUIDE](#)